


## Linkage for MVE/MVH Actuator

### MOUNTING INSTRUCTIONS

| Model | Description                                                                                                                  |
|-------|------------------------------------------------------------------------------------------------------------------------------|
| AG51  | Joint to motorise VMB16/VBG/VSG (45 mm stroke)<br>and SS/DS/3V/VSS/VBS/VMS/VBAA iSMA CONTROLLI valves with MVE-MVH actuators |


#### Preliminary Operations

- Remove the ring nut, screwed on the thread of the valve neck, and the stem protection (if present);
- a 10 mm and two 20 mm "C" spanners are required;
- insert the nut **(2)** on the valve stem **(1)**;
- insert the two semi-washers **(3)** into the stem undercut **(1)** with the flat side downwards;
- screw and lock the extension **(4)** (Spanner 10) on the nut **(2)** (Sp. 20);
- tighten lock nut **(5)** (Sp. 20) holding the pivot with the nut steady (Sp. 20);
- screw the nut **(6)** on the pivot **(4)**.

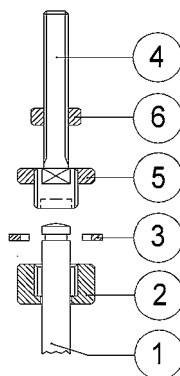

#### Joint Mounting

- Screw down completely joint **(7)** on the valve neck and make sure it is tightened completely on the thread.

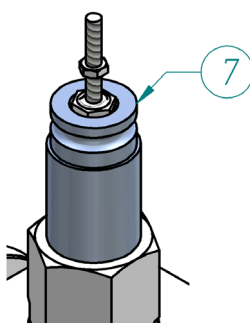

AG51

#### Actuator Mounting

- It is possible to mount the MVE/MVH actuator on the valve according to the mounting instructions of the actuator.